


ORDINARY CLEANING

For the internal cleaning of the oven it is advisable to use the appropriate brass brushes. Never throw water inside: it is important to avoid strong temperature changes that could damage the oven.

Perform the maintenance operations listed below at least once a year. In the case of seasonal service, it is recommended to perform maintenance at the end of each heating season; in the case of continuous service, maintenance must be performed every 6 months. For more information contact our technicians.

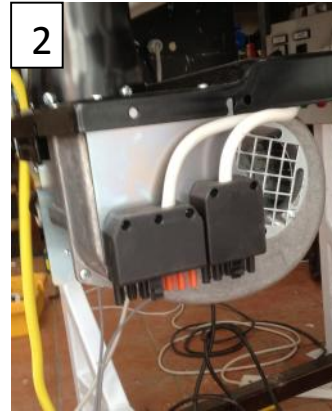

Disconnect the gas pipe from the valve group to the burner body..... **1**

Disconnect the multipolar connectors of the control panel and of the valve group to burner..... **2**



Unlock the flange **3** screws and turn the burner 15 degrees following the holes. **4**

Remove the burner with the flange inserted through the hole in the oven.... **5**



N.B. : Detail of the mouthpiece. **6**

Remove the mouthpiece. **6**

N.B. : USE ISOTHERMAL GLOVES
Remove any residues of monoxide from the head and electrodes.

Cleaning with a brush. **7**

Cleaning with compressor. **8**

REPEAT THE OPERATIONS ON THE CONTRARY