


## MOUNTS AND CONNECTIONS

To install the oven burner, follow the instructions below.



Preparation of insulating hole and arrange the prepared segment

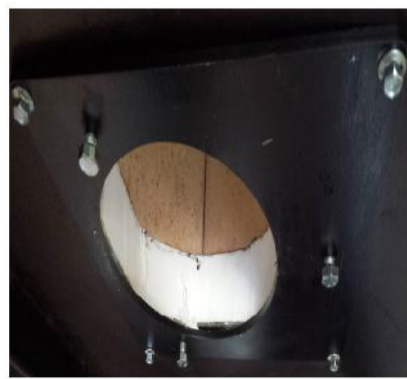

Flange fixed on the oven with oval hole



Burner prepared in-place with flange



N.B.: Detail of the Insertion Mouthpiece



Burner with Mouthpiece




Insert the burner through the oven hole and the 3 holes with screws



Turn the burner 15 degrees following the holes and lock the 3 screws



Fix the knob on the leg.  
Example DX

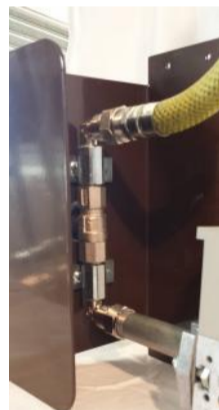

Connect the valve assembly to the knob using the lower coupling. Use the supplied hose to connect the upper part of the knob to the burner body. Connect the cables to the valve assembly.




Connect the tube with the burner body



Connect the multi-polar connectors of the switchgear and the valve group to the burner



Fasten the electrical panel to the oven in the position provided under the sill

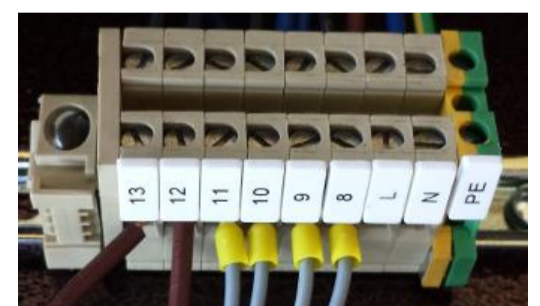

Open the panel and connect the power supply

**NOTE:**  
The setting and position of the burner is set in advance in relation to the oven selected by the customer.  
In the case of the G-SM -C models, the installer must follow the assembly as described above.  
In all the other models of ovens, G-MP4, G-M, TANGO-G-EL, TANGO-LG-EL the burner, the valve group and the knob are already prepared in advance. The installer must fix the electrical panel and connect the supply networks.

Go to page ... of the manual

Turn on the electronic panel  
Set the automatic switch-off temperatures.